 
 


## FM2M ToolBox Features comparison

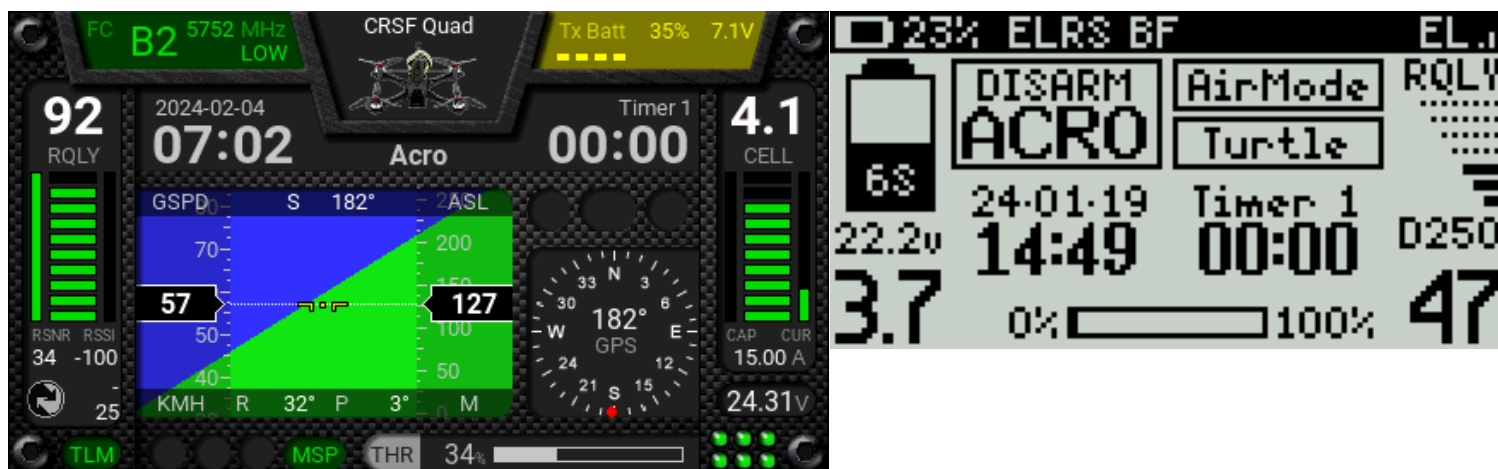


MODULE	FEATURE	Lite	PRO	Remarks
General features	Persistent configuration (SD-CARD)	v	v	
	Running in background mode	v	v	
	MSP protocol support		v	
Dashboard	RC Link (RQLY or RSSI)	v	v	
	RSNR		v	COLOR LCD radios only
	RSSI (if RQLY as main)		v	COLOR LCD radios only
	RC Link speed		v	
	Model battery total voltage	v	v	
	Model battery average cells voltage	v	v	
	Model battery cells count	v	v	
	Model battery current drawn		v	COLOR LCD radios only
	Model battery capacity		v	COLOR LCD radios only
	Radio battery voltage	v	v	
	Radio battery remaining %		v	
	Radio battery cells count		v	
	Model name	v	v	
	Model picture	v	v	
	Model Arm status (using Switch)	v	v	
	Model Arm status (Telemetry)		v	
	Model Gyro/ mode (using Switch)	v	v	
	Model Gyro/FC Status (Telemetry)		v	
	VTX channel name		v	
	VTX frequency		v	
	VTX power level		v	
	VTX pitmode		v	
	VTX Favourites Panel		v	
Artificial horizon (pitch & roll)		v	COLOR LCD radios only, (CRSF, ELRS)	

## FM2M ToolBox Features comparison

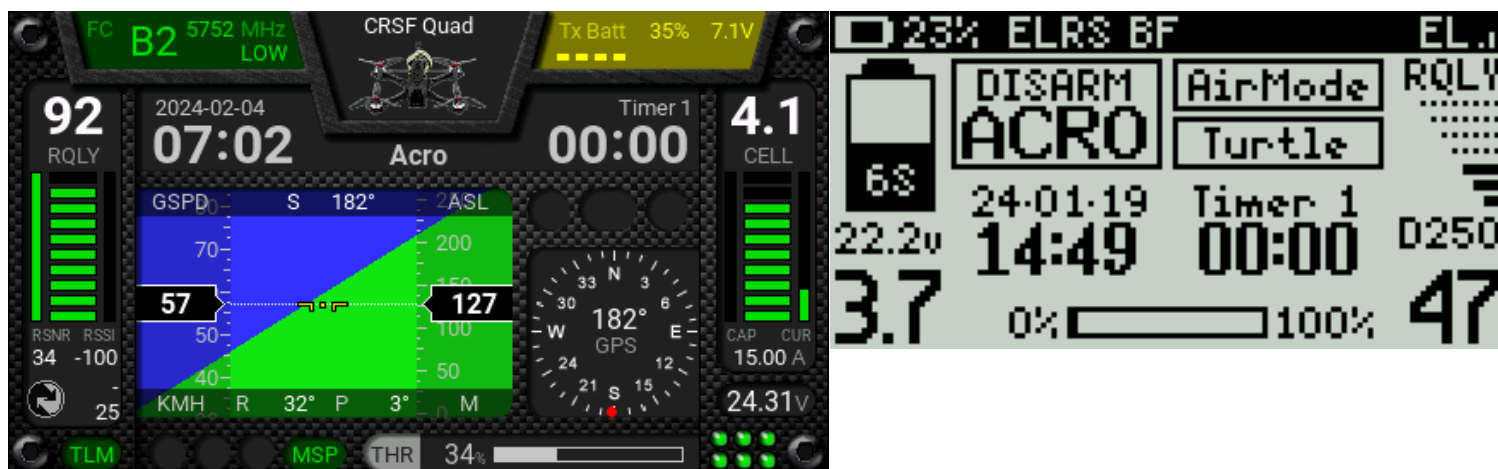


MODULE	FEATURE	Lite	PRO	Remarks	
	Heading (gyro based)		v	COLOR LCD radios only, (CRSF, ELRS, D16)	
	GPS Heading		v	COLOR LCD radios only, GPS needed	
	GPS speed (Ground speed)		v	COLOR LCD radios only, GPS needed	
	GPS Altitude (ASL)		v	COLOR LCD radios only, GPS needed	
	GPS Position		v	COLOR LCD radios only, GPS needed	
	GPS Fix / Sat number		v	COLOR LCD radios only, GPS needed	
	GPS Home position		v	COLOR LCD radios only, GPS needed	
	GPS Home distance		v	COLOR LCD radios only, GPS needed	
	GPS Home heading marker		v	COLOR LCD radios only, GPS needed	
	Throttle limiter indicator			v	
	All Telemetry sensors view (raw values)			v	
	Persistent telemetry values	v		v	
	Flight reset (telemetry/timer)			v	
	Temporary alerts muting			v	
Configuration	Radio - Radio Mode	v	v		
	Radio - Start module		v	B&W LCD radios only	
	Radio - Theme		v	COLOR LCD radios only	
	RC Link - Protocol selection	v	v		
	RC Link - RSSI warnings levels		v		
	RC Link - RQLY warnings levels		v		
	RC Link - RSNR warnings levels		v		

## FM2M ToolBox Features comparison

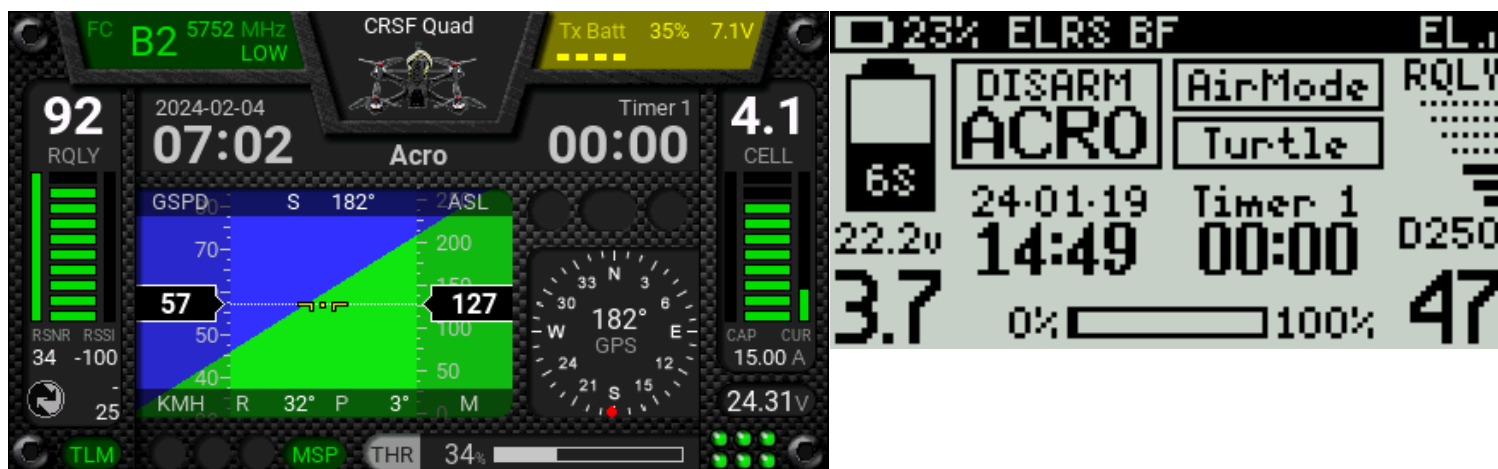

MODULE	FEATURE	Lite	PRO	Remarks
	Model battery - Cell minimum level		✓	
	Model battery - Cell maximum level		✓	
	Model battery - Cell no power level		✓	
	Model battery - Cell voltage alerts		✓	
	Model battery - Alerts type		✓	
	FC - firmware type		✓	
	MSP - FC, VTX read		✓	
	VTX - host (native or MSP)		✓	
	VTX - proxy		✓	
	VTX - Frequency range (allowed channels)		✓	
	VTX FAVS		✓	
	Dashboard Panels - Arm Status		✓	
	Dashboard Panels - Flight Mode		✓	CRSF & ELRS only
	Dashboard Panels - AirMode Status		✓	
	Dashboard Panels - Crash Flip Status		✓	CRSF & D16 only
	Dashboard Panels - Throttle Cut		✓	
	Dashboard Panels - Throttle Limiter		✓	
	Dashboard Panels - Arm Timer		✓	
VTX module	Channels Chart (channels by frequency)		✓	
	Channels Table (channels by name)		✓	B&W Only
	Next channel selection & info		✓	
	VTX Region		✓	
	Channel view type		✓	
	Channel symbol reading		✓	
	Frequency reading		✓	
	Power level reading		✓	
	PitMode status reading		✓	
Sticks Commands module	Commands overview		✓	
	Radio mode selection (1,2,3,4)		✓	

## FM2M ToolBox Features comparison

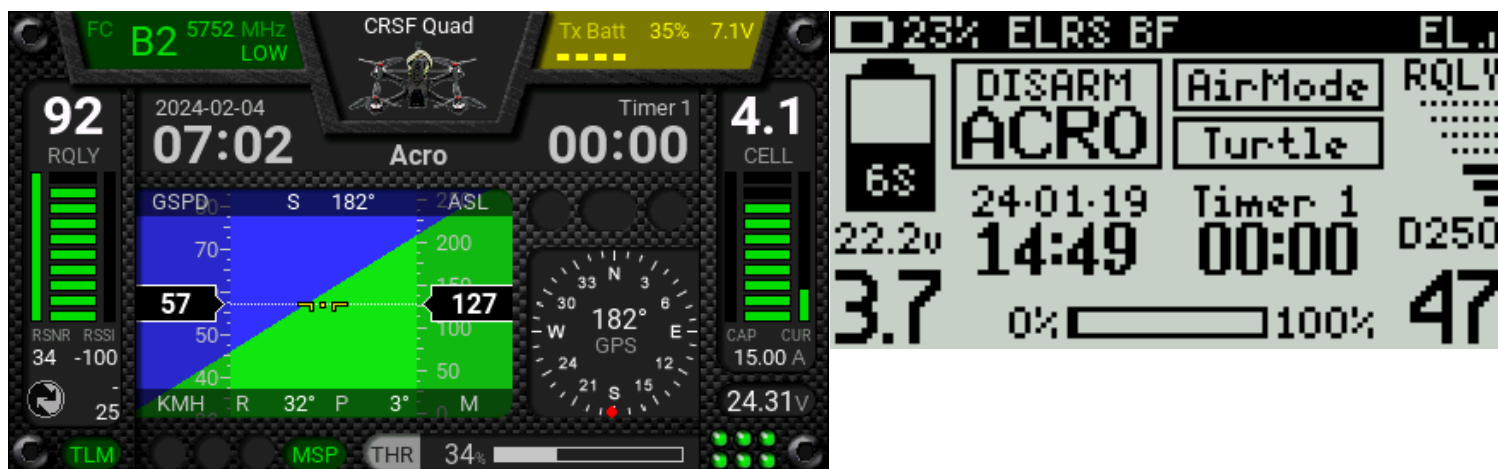

MODULE	FEATURE	Lite	PRO	Remarks
FC Arm Stops module (BetaFlight)	Error overview		✓	COLOR LCD radios only, MSP needed
	Proposed sopution		✓	
	Error beep emulation		✓	
	Live Arm Stop preview		✓	
RAW Telemetry module	Live telemetry sensors preview		✓	
			✓	
GPS module	GPS 3D Fix		✓	COLOR LCD radios only
	GPS Sattelite number		✓	
	Aircraft LAT		✓	
	Aircraft LON		✓	
	Ground speed		✓	
	Altittude		✓	
	Ground course		✓	
	Home LAT		✓	
	Home LON		✓	
	Distance from Home		✓	
	Home ground course		✓	
	Live preview of available satellites		✓	